


ploopy A+


Base Layer: Left-Handed Navigation

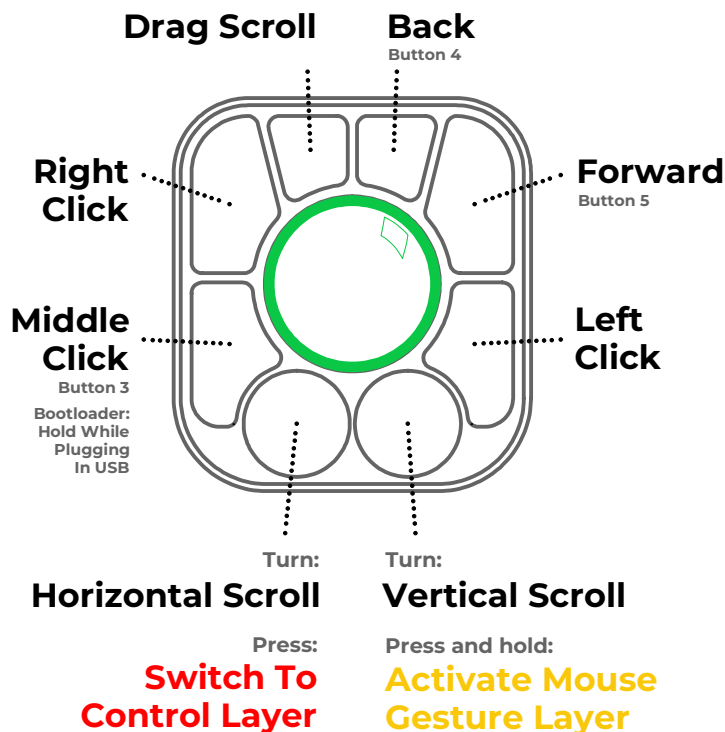

Revision A - 2026-08-06

ploopy A+


Base Layer: Navigation

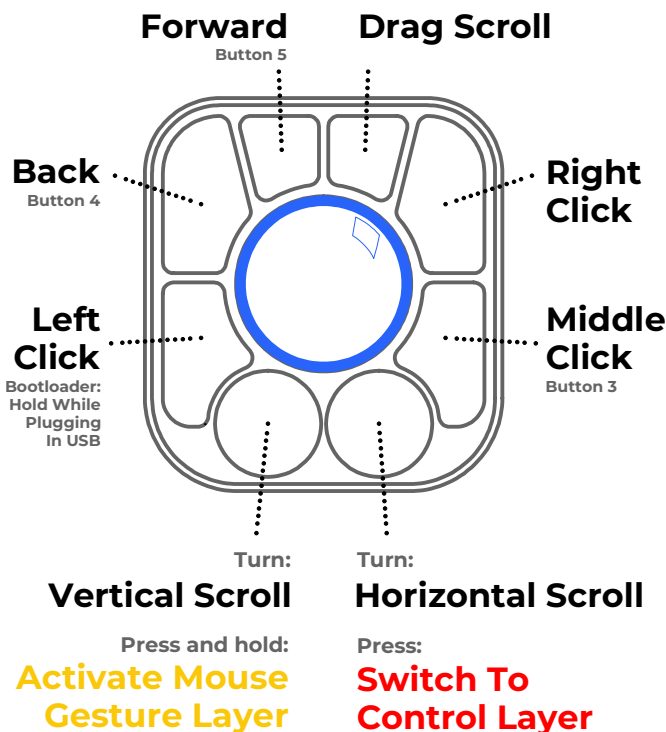

Revision A - 2026-08-06

ploopy A+

Mouse Gestures Layer

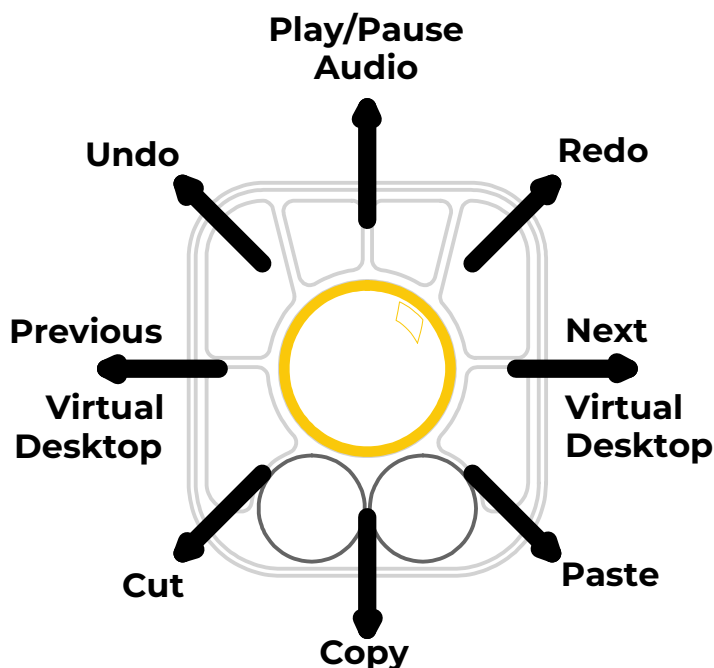

Gesture Instructions:

To activate a gesture, hold down the mouse gesture key and move the trackball in the desired direction. Let go of the gesture key to trigger the action. The LEDs will blink whenever a gesture is successfully inputted.

Revision A - 2026-08-06

ploopy A+


Control Layer

Adjust LED Brightness

Cycle LED brightness. Available settings: 0%, 25%, 50%, 75%, 100%.

Toggle Vertical Scroll Type

Switch between scroll events and up/down keypresses. Useful for text editing and adjusting sliders. Blinks once for arrows, twice for scroll events.

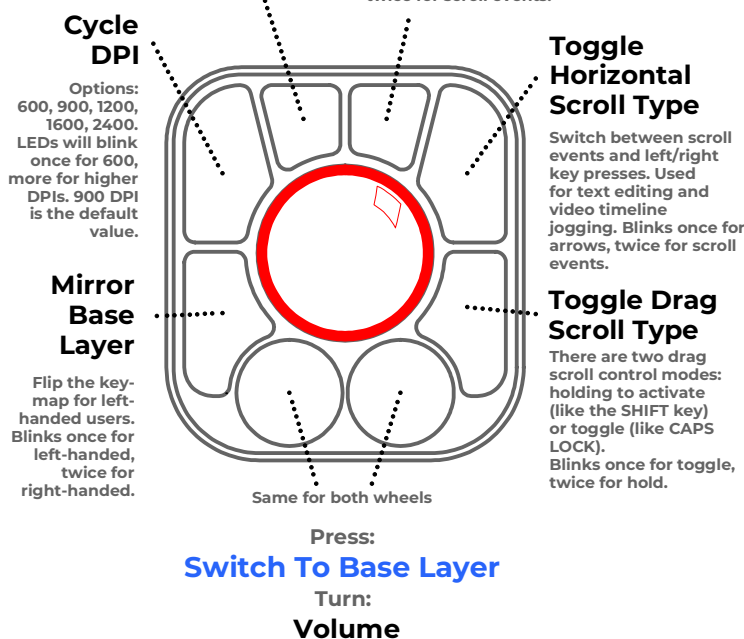

LEDs will blink briefly when a successful configuration change is made. Configuration changes are stored to memory and survive power cycling.

Revision A - 2026-08-06